
Assembly Instructions

Caution: You must read this before you proceed


Club Chair

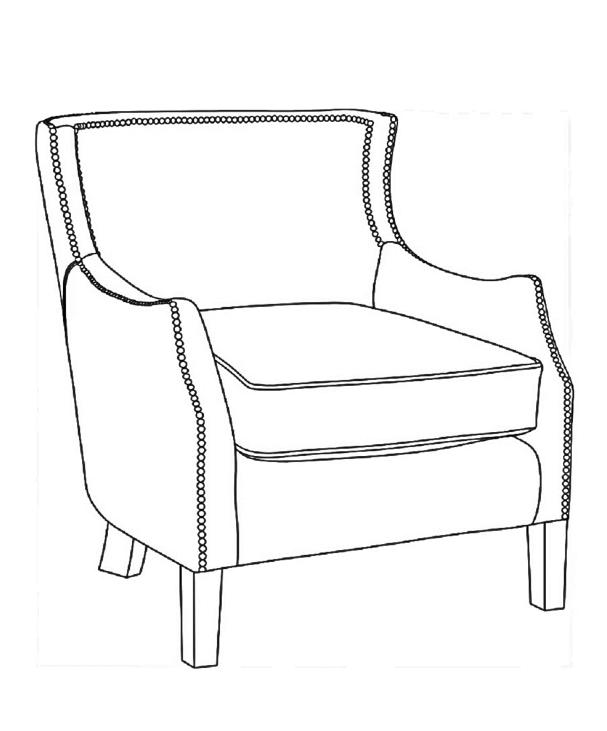

Parts List			
Label	Picture	Description	QTY
А		Chair Base	1
В		Front Wooden Leg (Labelled 'B')	2
С		Back Wooden Leg (Labelled 'C')	2
Hardware			
Label	Picture	Description	QTY
1		Washer Ring	7

Assembly Preparation

Before Beginning Assembly

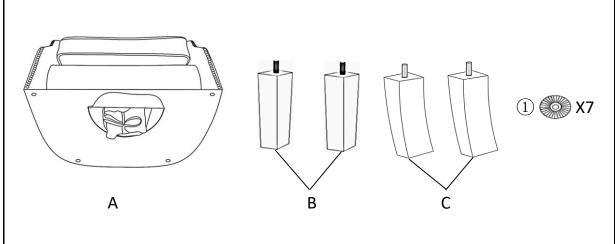



· Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




· Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

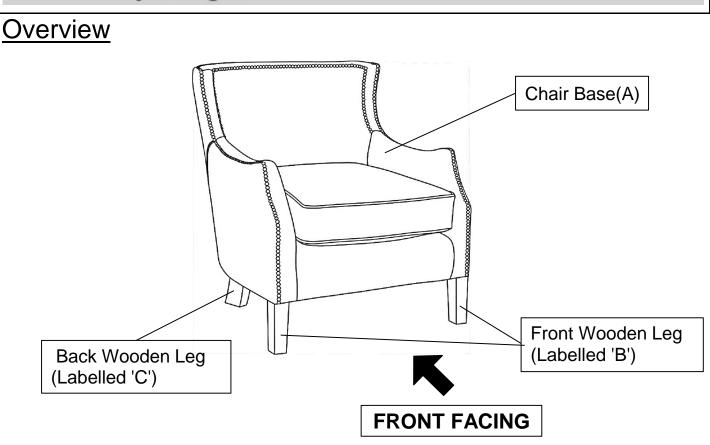


This Club Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

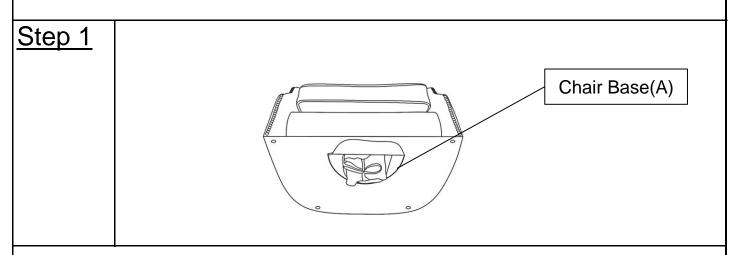

Place the Chair Base(A) on its back on a clean, non-marring surface as pictured above. Unzip the pouch and remove the four Legs and Hardware. Close the pouch before assembling.


Step 2

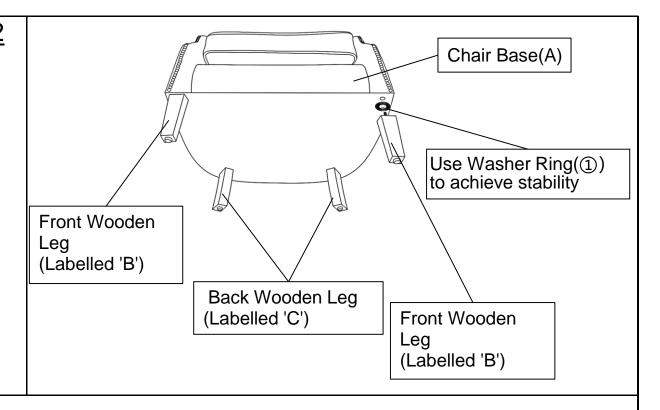

Install Front Wooden Leg(B) into the Chair Base(A) by putting a Washer Ring(①) on the threaded stem. Then insert the threaded stem into the mounting position at the corner of the base of the Chair Base(A). Tighten by turning the Front Wooden Leg(B) clockwise by hand. Repeat the same process to install the remaining Front Wooden Leg(B) and Back Wooden Leg(C).

Note: The use of Washer Rings are OPTIONAL and are especially useful to help alleviate slight wobbles. Some Legs may need more than one whilst some legs may not need any.

Step 3

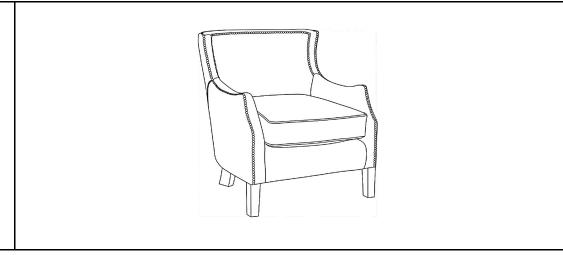

Make sure all parts are connected and locked into position. Your Club Chair is ready for use.

This Club Chair can only be used on a flat, level surface.

Care & Maintenance



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



Not for commercial use. For residential use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.