
Assembly Instructions

Caution: You must read this before you proceed

CHAIR

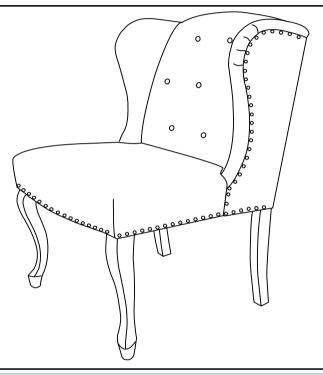


Parts List				
Label	Picture	Description	QTY	
A		Back	1	
В	Requestas as a second	Seat	1	
С		Front Leg	2	

Hardware				
Label	Picture	Description	QTY	
1		Bolt (8*70mm)	5	
2		Bolt (8*50mm)	4	
3		Spring Washer	10	
4		Washer	10	
(5)		Allen key	1	

Assembly Preparation

Before Beginning Assembly:

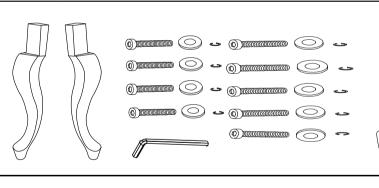



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-




· Save all packaging until finished-

Assembly Steps

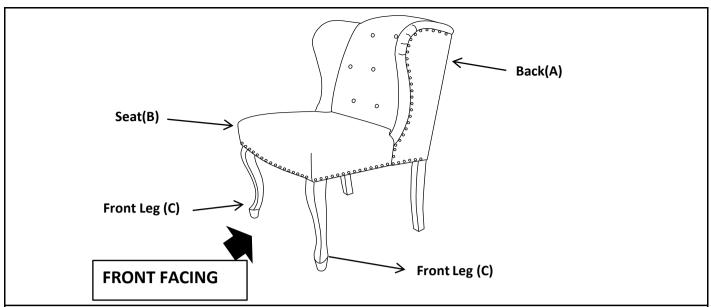

This Club Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



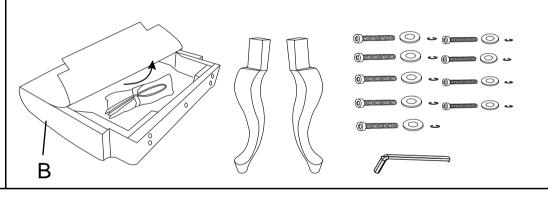


Position Chair(B) on its back as shown.

(DO NOT place on surface that can scratch or damage upholstery).

Carefully peel away the dust cover from the bottom edge.

Take the Legs and Hardware bag out of the Chair bottom.




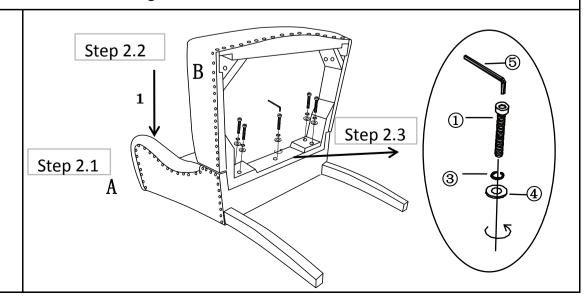

Put the chair back(A) onto a flat table or panel.

- 2.1 Align the positioning dowels on the Chair Seat with the mounting position located on the Chair Back- panel and Chair Seat panel.
- 2.2 Use your left hand to push the seat frame floorwards, depicted by Arrow 1. This action helps to ensure the chair seat(B) is pressed towards to the chair back(A) with no gap between these.
- 2.3 Lock the middle hole(use Blot(1)) and the two corner mounting positions later by using 5 Bolts(1),5 Spring Washers(3) and 5 Washers(4) with the Allen Washers(5). At this point of assembly, **LOOSELY TIGHTEN the connections.**


Step 3

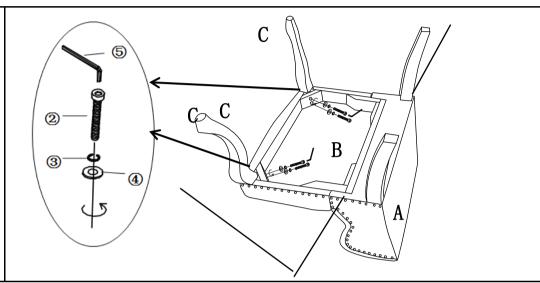

Put the chair onto a flat table as shown in pix

Insert the Front Leg(C) into the mounting position of Chair(A). Attach the Front Leg(C) using Bolts(②), Spring Washers(③) and Washers(④) with Allen Key(⑤). Repeat the same process to install the remaining one Leg. At this stage, only Loosely tighten the Bolts.

Step 4

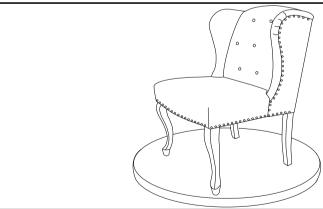

Place the chair on a LEVEL SURFACE to see if it wobbles.

If it wobbles, press firmly down on both armrests at the same time.


This will help to ensure all Bolts and gaps reach full alignment status.

If no wobbles found, proceed to tighten all the Bolts in a sequential manner.

DO NOT fully tighten a BOLT in one go and then move on to the next. Rather, in a sequential manner, gradually tighten each Bolt until all Bolts are evenly secured.


This methodology will ensure maximum eveness once all Bolts are fully tightened.

Step 5

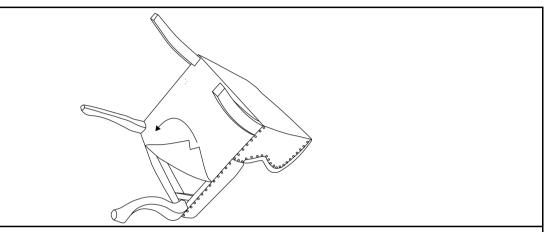

Smooth down the Velcro Strips with your hand on all four sides at the edge of the seat box.

Step 6

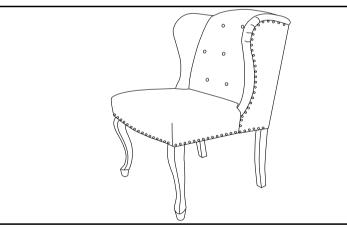

Stand the Club Chair right side up.

Make sure all parts are connected and securely locked into position.

Your Club Chair is ready for use.

This Club Chair can only be used on a flat, level surface.

Care & Maintenance

Do not put hot items directly on furniture surface

Do not clean furniture with harsh cleansers or polish.

Do not place furniture under direct sunlight.

Do not place furniture near heating or cooling vents.

Do not write on furniture without a padded barrier to protect the surface.

Do not place furniture outside . For indoor use only .

Not for commercial use. For residential use only .

Stains may be removed with mild soap solution and damp cloth.

Children should not climb or jump on the furniture.

✓ Oust and pick-up spills using a clean, non-colored, lint-free cloth .

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances.

which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocerystore, or restaurant without finding at least one warning. In fact, even the

Disney Land Resort has a Proposition 65 warning:

