

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

100773 Dining Side Chair

REVISION 0: 01/10/2006 REVISION 1: 02/17/2012 REVISION 2: 07/13/2020

PAGE 1 OF 4

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME	1PC
В	FRONT LEG FRAME	1PC
С	SIDE RAIL	2PCS
D	SEAT CUSHION	1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110MM - BLK)		1PC
2	BOLT (M6 x 50MM - RBW)		6PCS
3	LOCK WASHER (1/4" - BLK)	@	6PCS
4	PAN HEAD SCREW (#8 x 1" -BLK)	~ ummu.(}	4PCS


NOTF:

Phillips head screw driver is required in the assembly process; However, manufacturer not provide this item. Quantities shown are for one chair.

ASSEMBLY INSTRUCTIONS



STEP 1

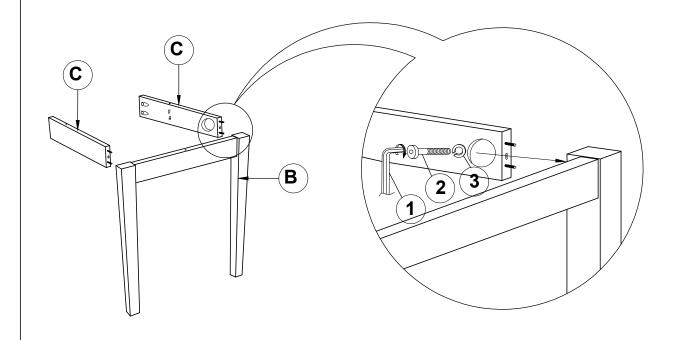


STEP 2 A PAGE 3 OF 4 COASTERFURNITURE.COM


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

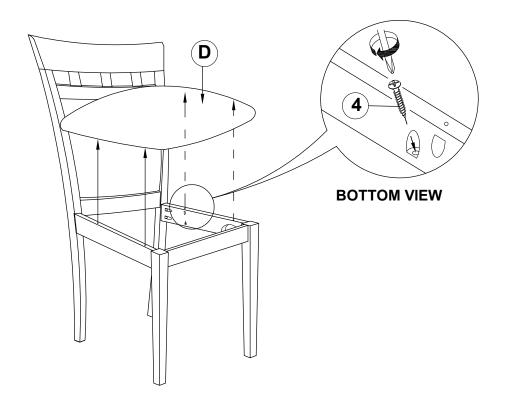


STEP 4 COMPLETE

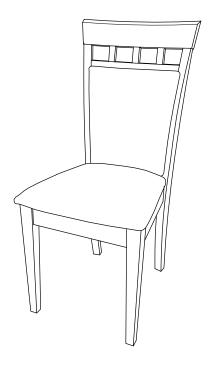





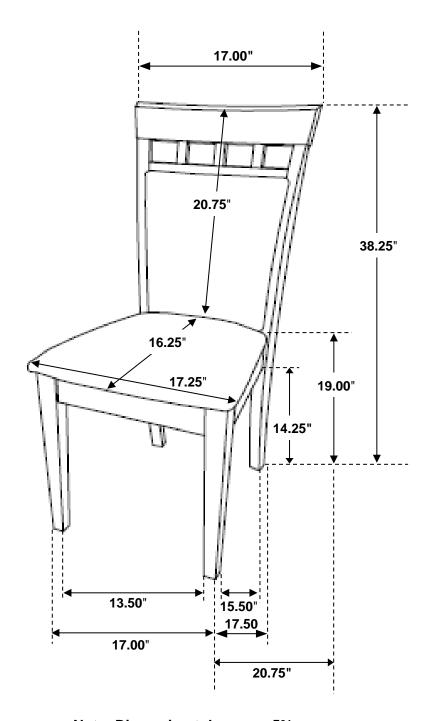

Note: Dimension tolerance ±5%