

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

### 100872 <u>ARM CHAIR</u>

REVISION 0: 10/4/2019 REVISION 1: 6/1/2022

REVISION 2: 4/28/2023

PAGE 10F 6

#### ITEM: 100872

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- Remove hardware from box and sort by size.
   Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

#### PARTS IDENTIFICATION

AA	LEFT ARMREST		1
AB	RIGHTARMREST		1
В	BACKREST		1
С	SEAT		1
D	BASE		1
Е	CASTER	6	5
F	WOODEN COVER		1
G	SEAT PLATE		1
Н	SUPPORTING BAR		1

### ITEM:100872



### **HARDWARE IDENTIFICATION**

1	LEFT ARMREST(1/4*45)		2
2	RIGHTARMREST(1/4*25)		4
3	METAL WASHER(5/16*19)	0	10
4	HEX NUT(5/16*13)		4
5	SCREW(8*4*50)		2
6	GLUE		1
7	ALLEN WRENCH(1/4)		1
8	SPANNER(5/16)		1
9	WOODEN PLUG(12.5*9)		2
10	LARGE SPRING WASHER(5*16)		4
11	SMALL SPRING WASHER(1/4)		6
12	WOOD SCREW(3*12)		4
13	SLICE SWITCHING(10*10)		2


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


### TEM:**100872**

# COASTER<sup>®</sup>

ASSEMBLY INSTRUCTIONS LOWER BED END STEP 1

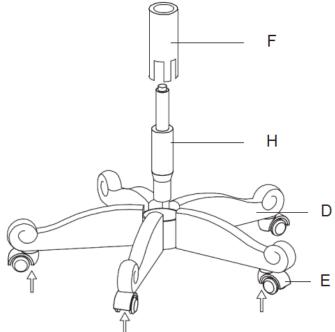


## UPPER BED END STEP 2

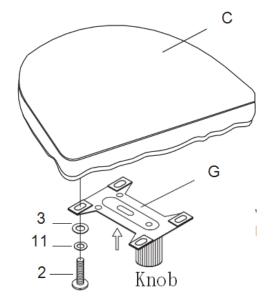

### ITEM: 100872

# COASTER® FINE FURNITURE

ASSEMBLY INSTRUCTIONS LOWER BED END STEP 3

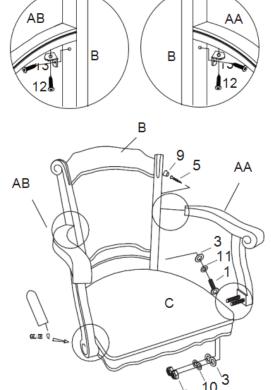

## UPPER BED END STEP 4

