

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0: 10/06/2017 REVISION 1: 03/16/2020 REVISION 2: 04/12/2024

PAGE 1 OF 4

ITEM: 102068



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

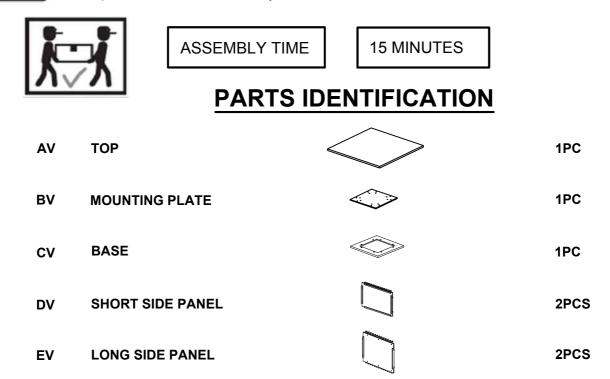

HARDWARE IDENTIFICATION

1	BOLT (Ø1/4" x 1-1/4" - BLK)		36PCS
2	LOCK WASHER (Ø1/4" - BLK)	\bigcirc	36PCS
3	FLAT WASHER (Ø1/4" - BLK)	\odot	36PCS
4	WOOD DOWEL (Ø8x30MM - BLK)	<i><u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u></u></i>	16PCS
5	ALLEN WRENCH (4MM - BLK)		1PC


PAGE 2 OF 4

ITEM: 102068


ASSEMBLY INSTRUCTIONS




STEP 1

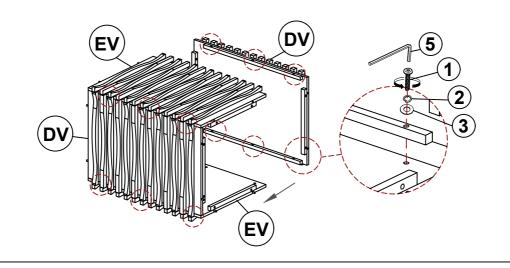

STEP 2

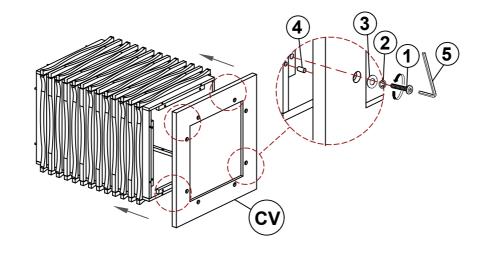

STEP 3

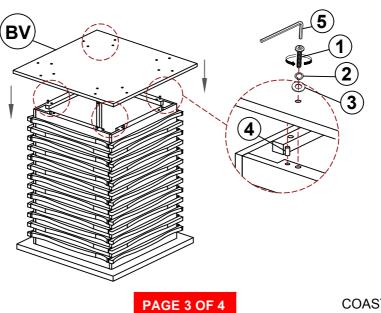


ITEM: 102068

ASSEMBLY INSTRUCTIONS



STEP 4

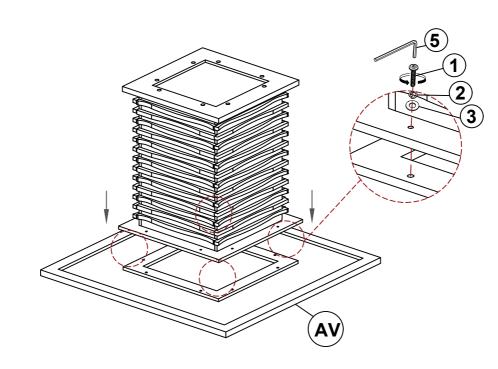

STEP 5 COMPLETE



