

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

200977
Bench

ITEM:200977



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

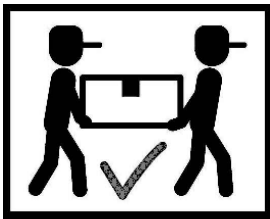

ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A SEAT CUSHION WITH FRAME



 
1PC

B LEG



4PCS

C BOTTOM FRAME



1PC

 
HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(M4 - BLK)



1PC

2 BOLT WITH WASHER
(M6 x 60mm - BLK)



12PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **200977**




ASSEMBLY INSTRUCTIONS



STEP 1

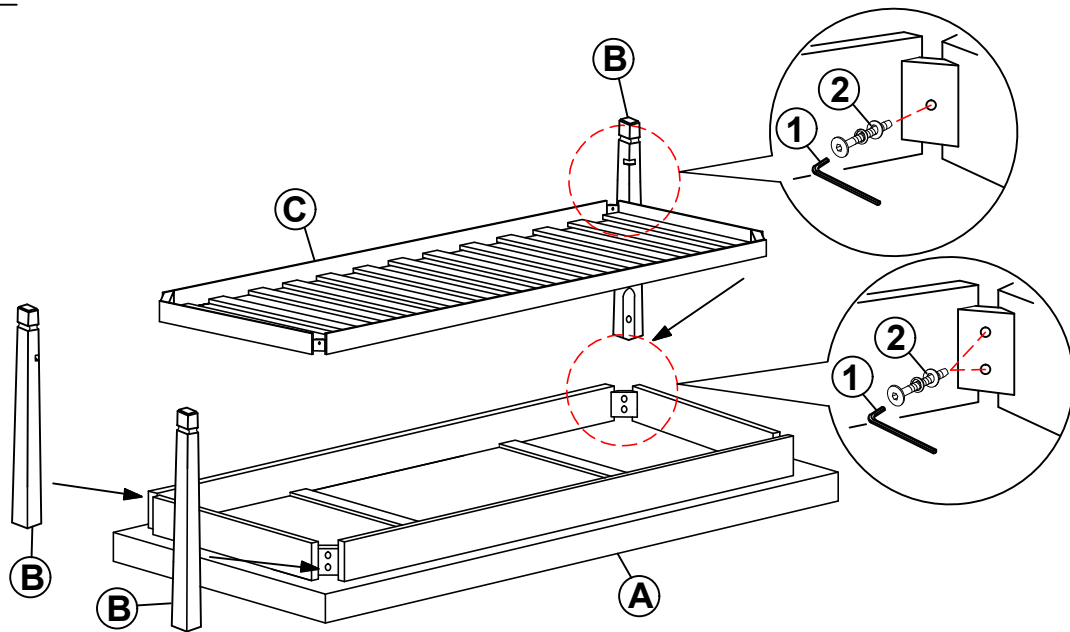

STEP 2

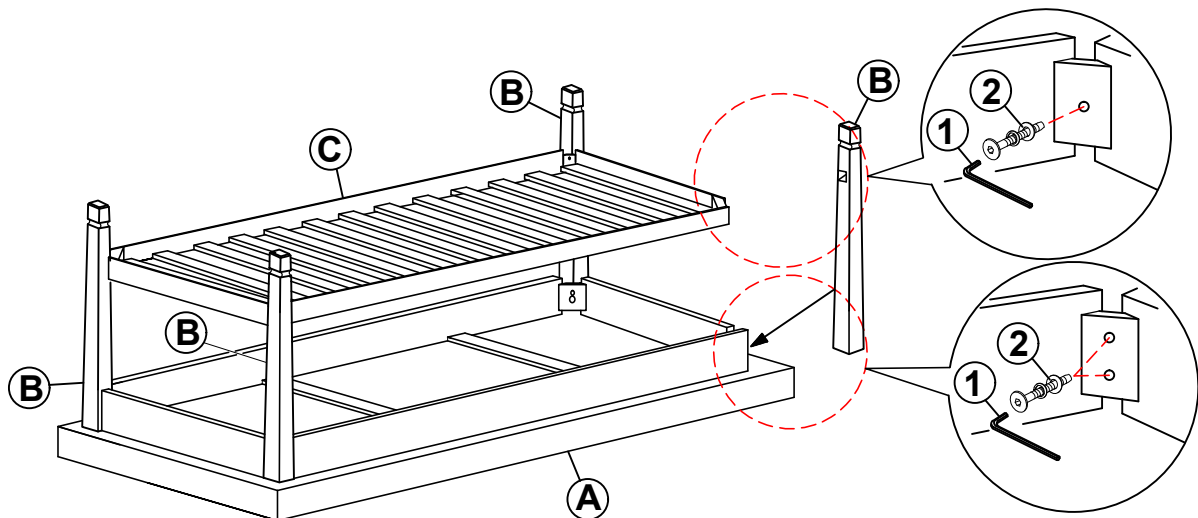


STEP 3 COMPLETE

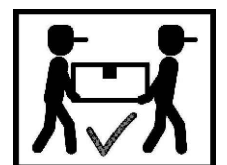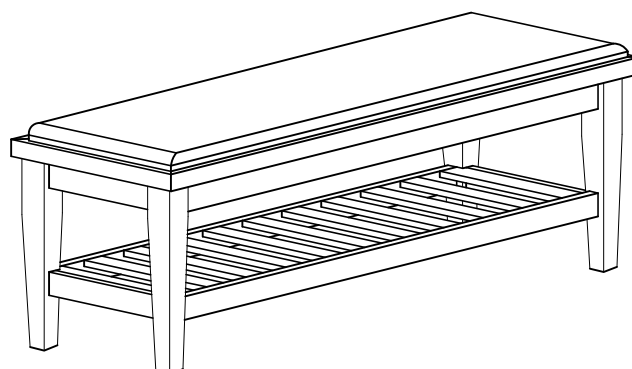

ITEM:200977

COASTER
FINE FURNITURE

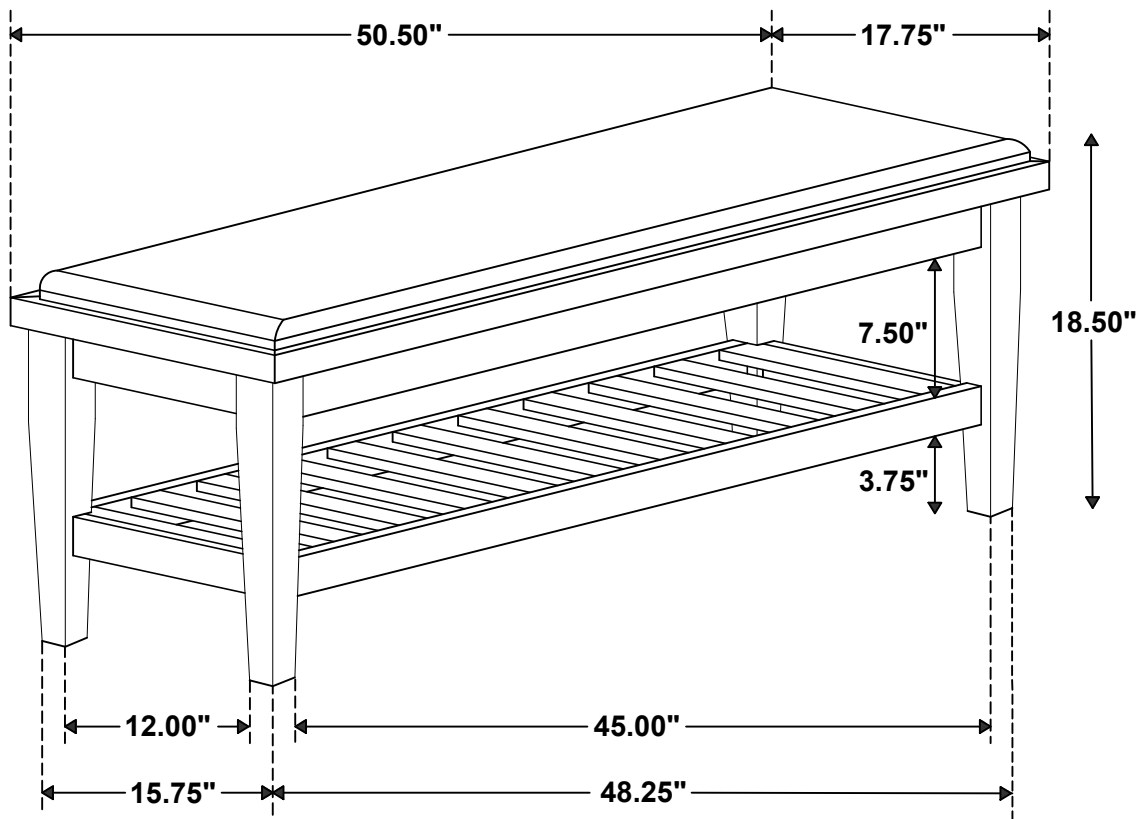

Note: Dimension tolerance $\pm 5\%$