


 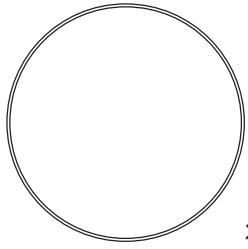











ITEM NAME / NOM D'ITEM: GAZEBO DINING TABLE


ITEM # / NO.ITEM: 704052 / 704053

PARTS LIST / LISTE DES PIÈCES


(1)	(2)	(3)	(4)	(5)
 ×1	 ×1	 ×1	 ×1	A.  M10*41mm 2PCS B.  M6*15mm 2PCS C.  M5*23mm 4PCS D.  M10mm 2PCS E.  M10mm 2PCS F.  12mm 1PCS G.  6mm 1PCS H.  5mm 1PCS I.  metal tube 1PCS

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE


I

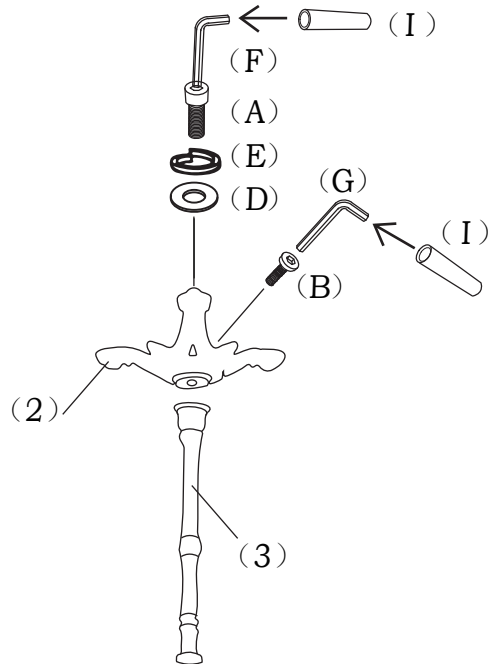


II

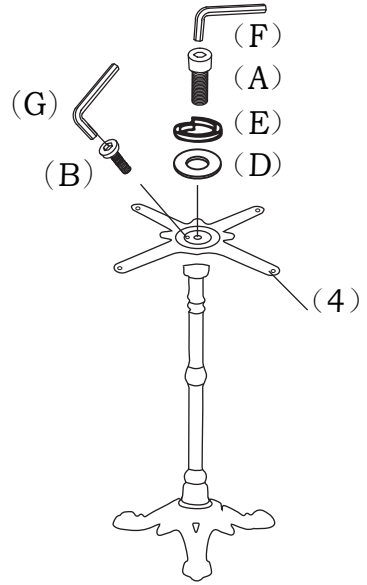

III

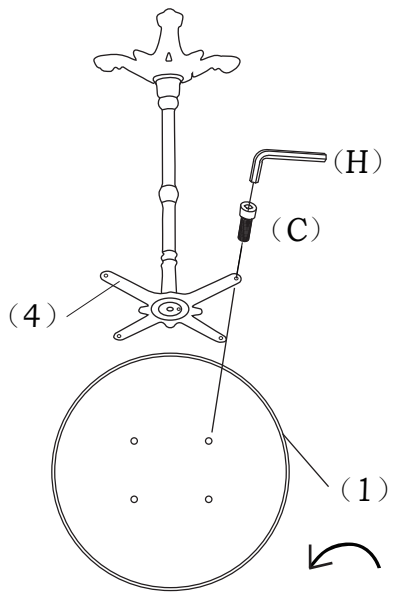

IV

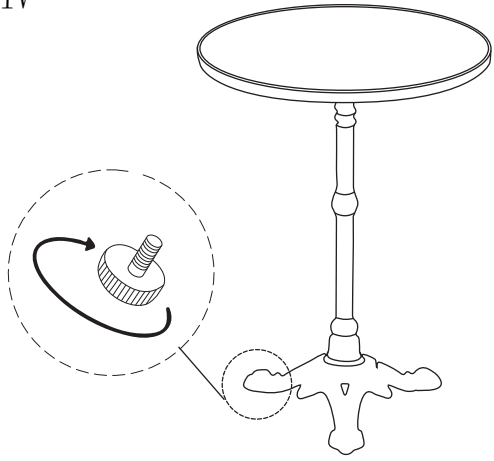

Please use the attached adjustable footglides to level the table on uneven surface.

For missing parts or damaged parts, please call /
 Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663

AI-V1-240118