



AC183/AC184 ASSEMBLY INSTRUCTION

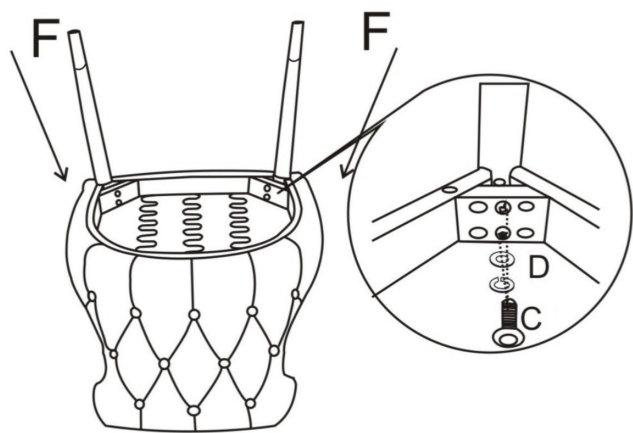


1

Put the screws in the holes, tight the screws, but not too tight, 90% is ok

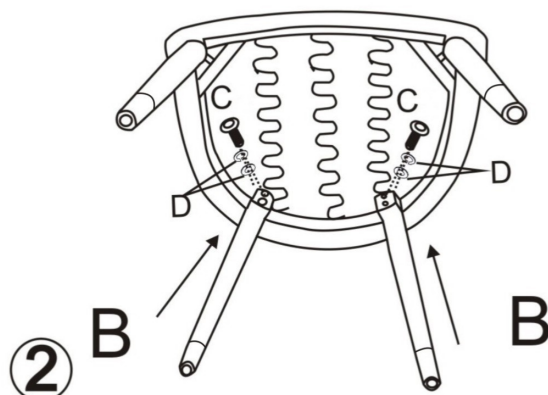


2

Put the screws in the holes, tight the screws, but not too tight, 90% is ok

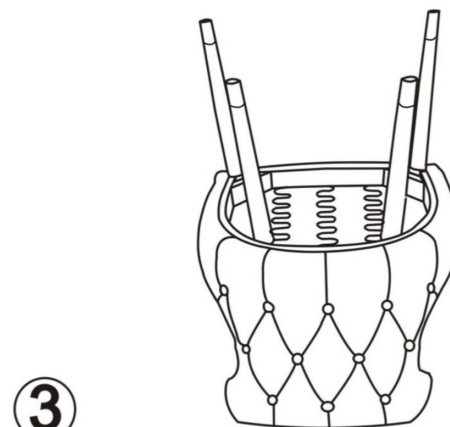





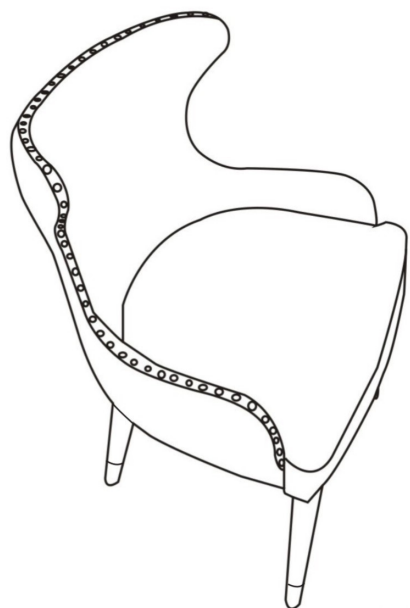


3

Stand the chair upright & ensure it is level before tightening all screws. Then tight all the screws to 100%



4

 <p>A</p>	 <p>F</p>	 <p>B</p>
<p>Back 1PC</p>	<p>Frontleg 2PCS</p>	<p>Backleg 2PCS</p>
<p>C  M6X50mm 8PCS</p>		<p>D   8PCS </p>

CAUTION: Leg and hardware pack inside dust cover underneath seat cushion