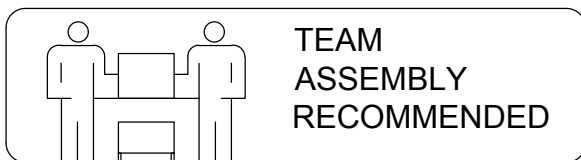
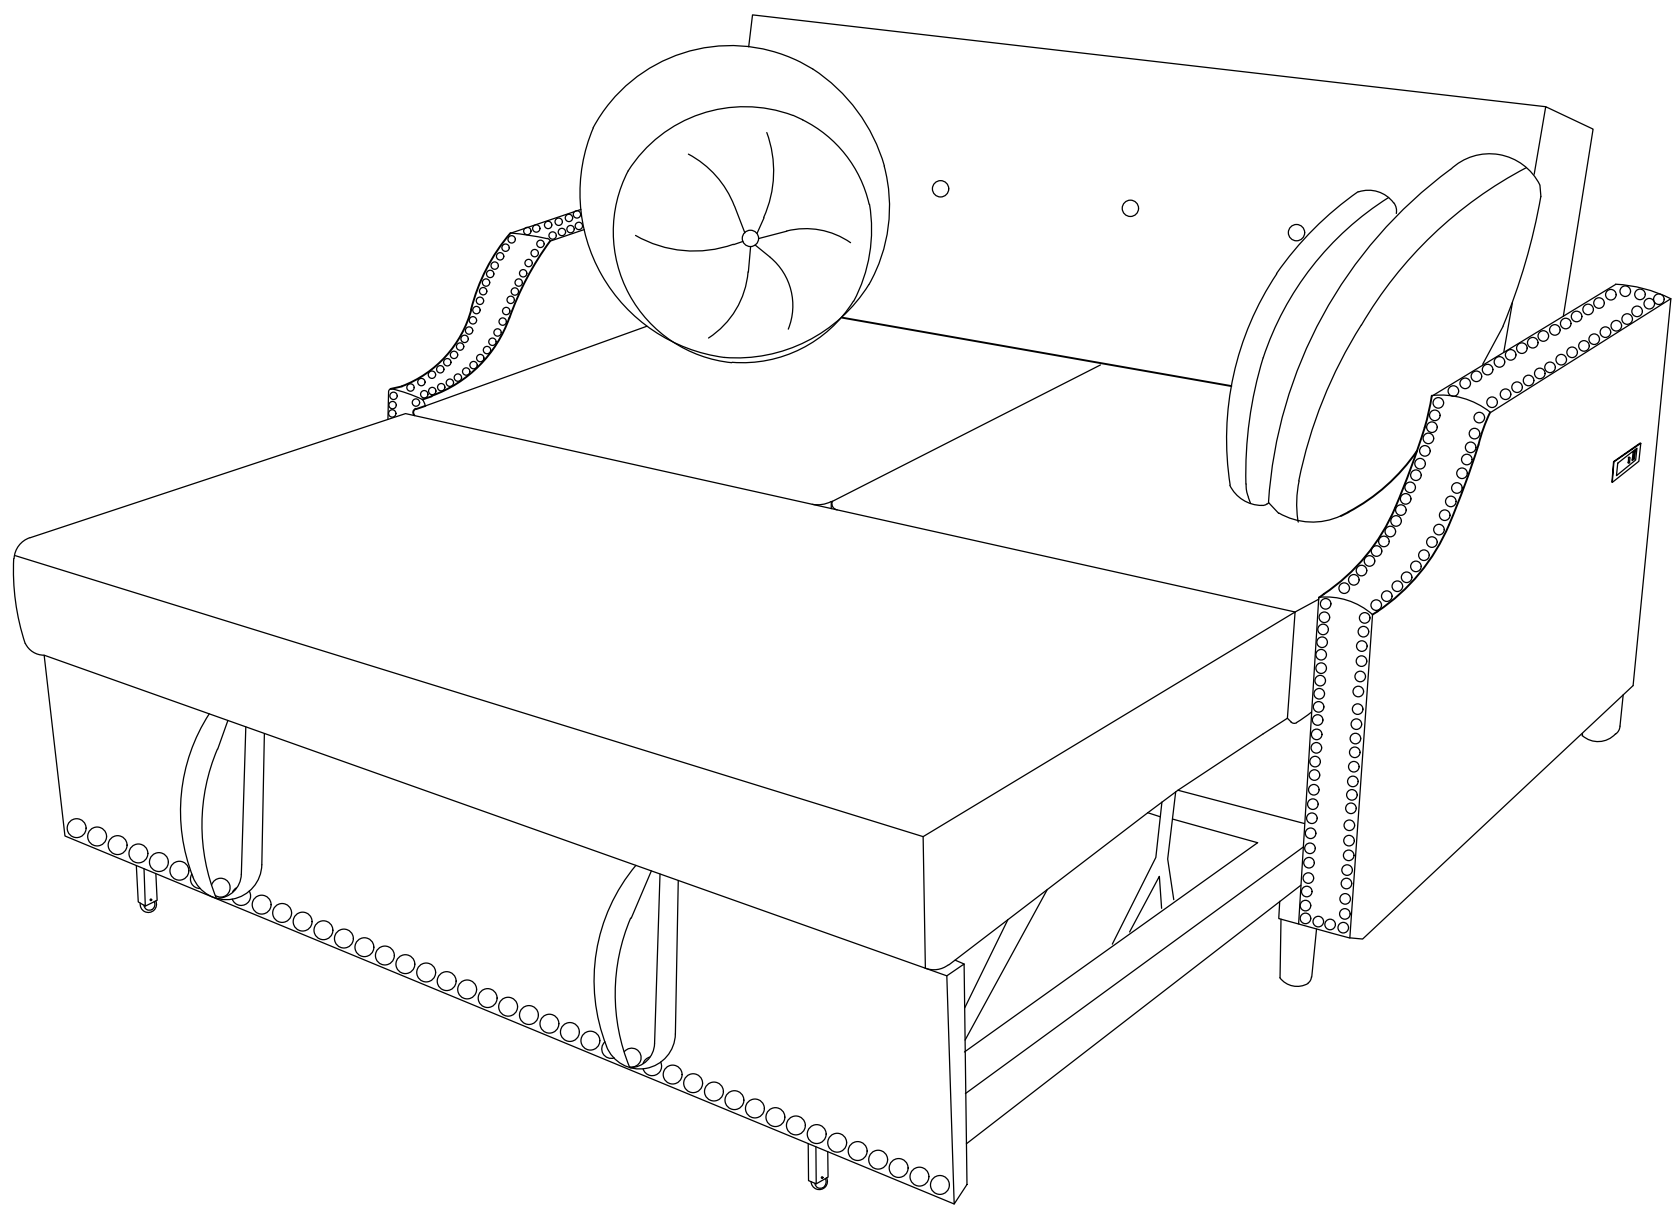


INSTRUCTION

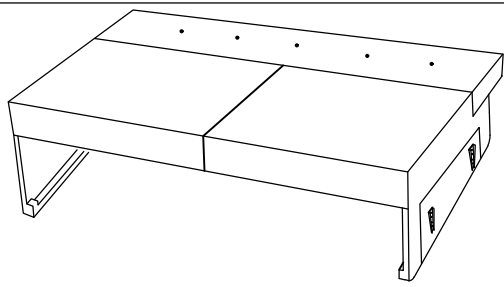
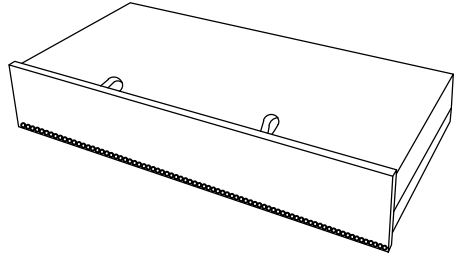
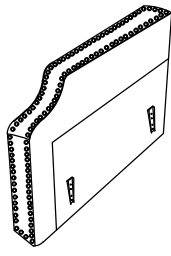
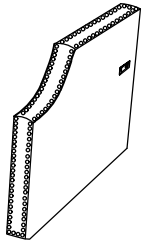
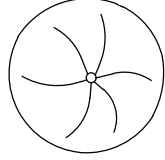

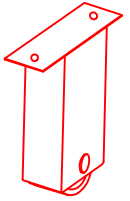
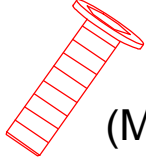
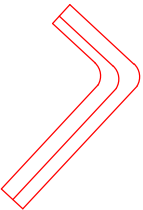
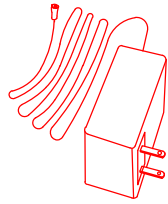
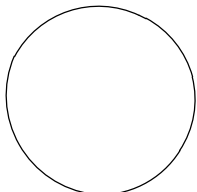
WF321613



TEAM
ASSEMBLY
RECOMMENDED

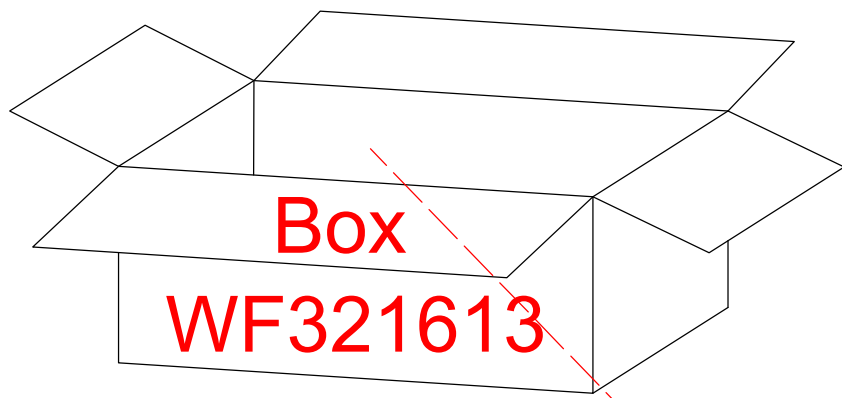
SOFA BED

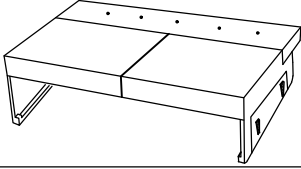
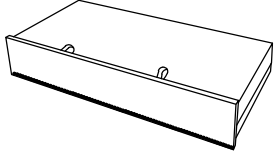


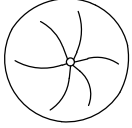





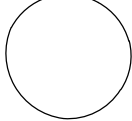
PARTS LIST

NO	PART	DECS	QTY
A		SEAT CUSHION	1pc
B		TRUNDLE BED	1pc
C		LEFT ARM	1pc
D		RIGHT ARM	1pc
E		PILLOW	2pc
F		LEGS	4pc
G		LEGS	4pc
H	 (M6*20MM)	SHORT SCREW	8pc
I		L-SHAPED WRENCH	1pc
J		USB POWER	1pc
K		PILLOW	2pc

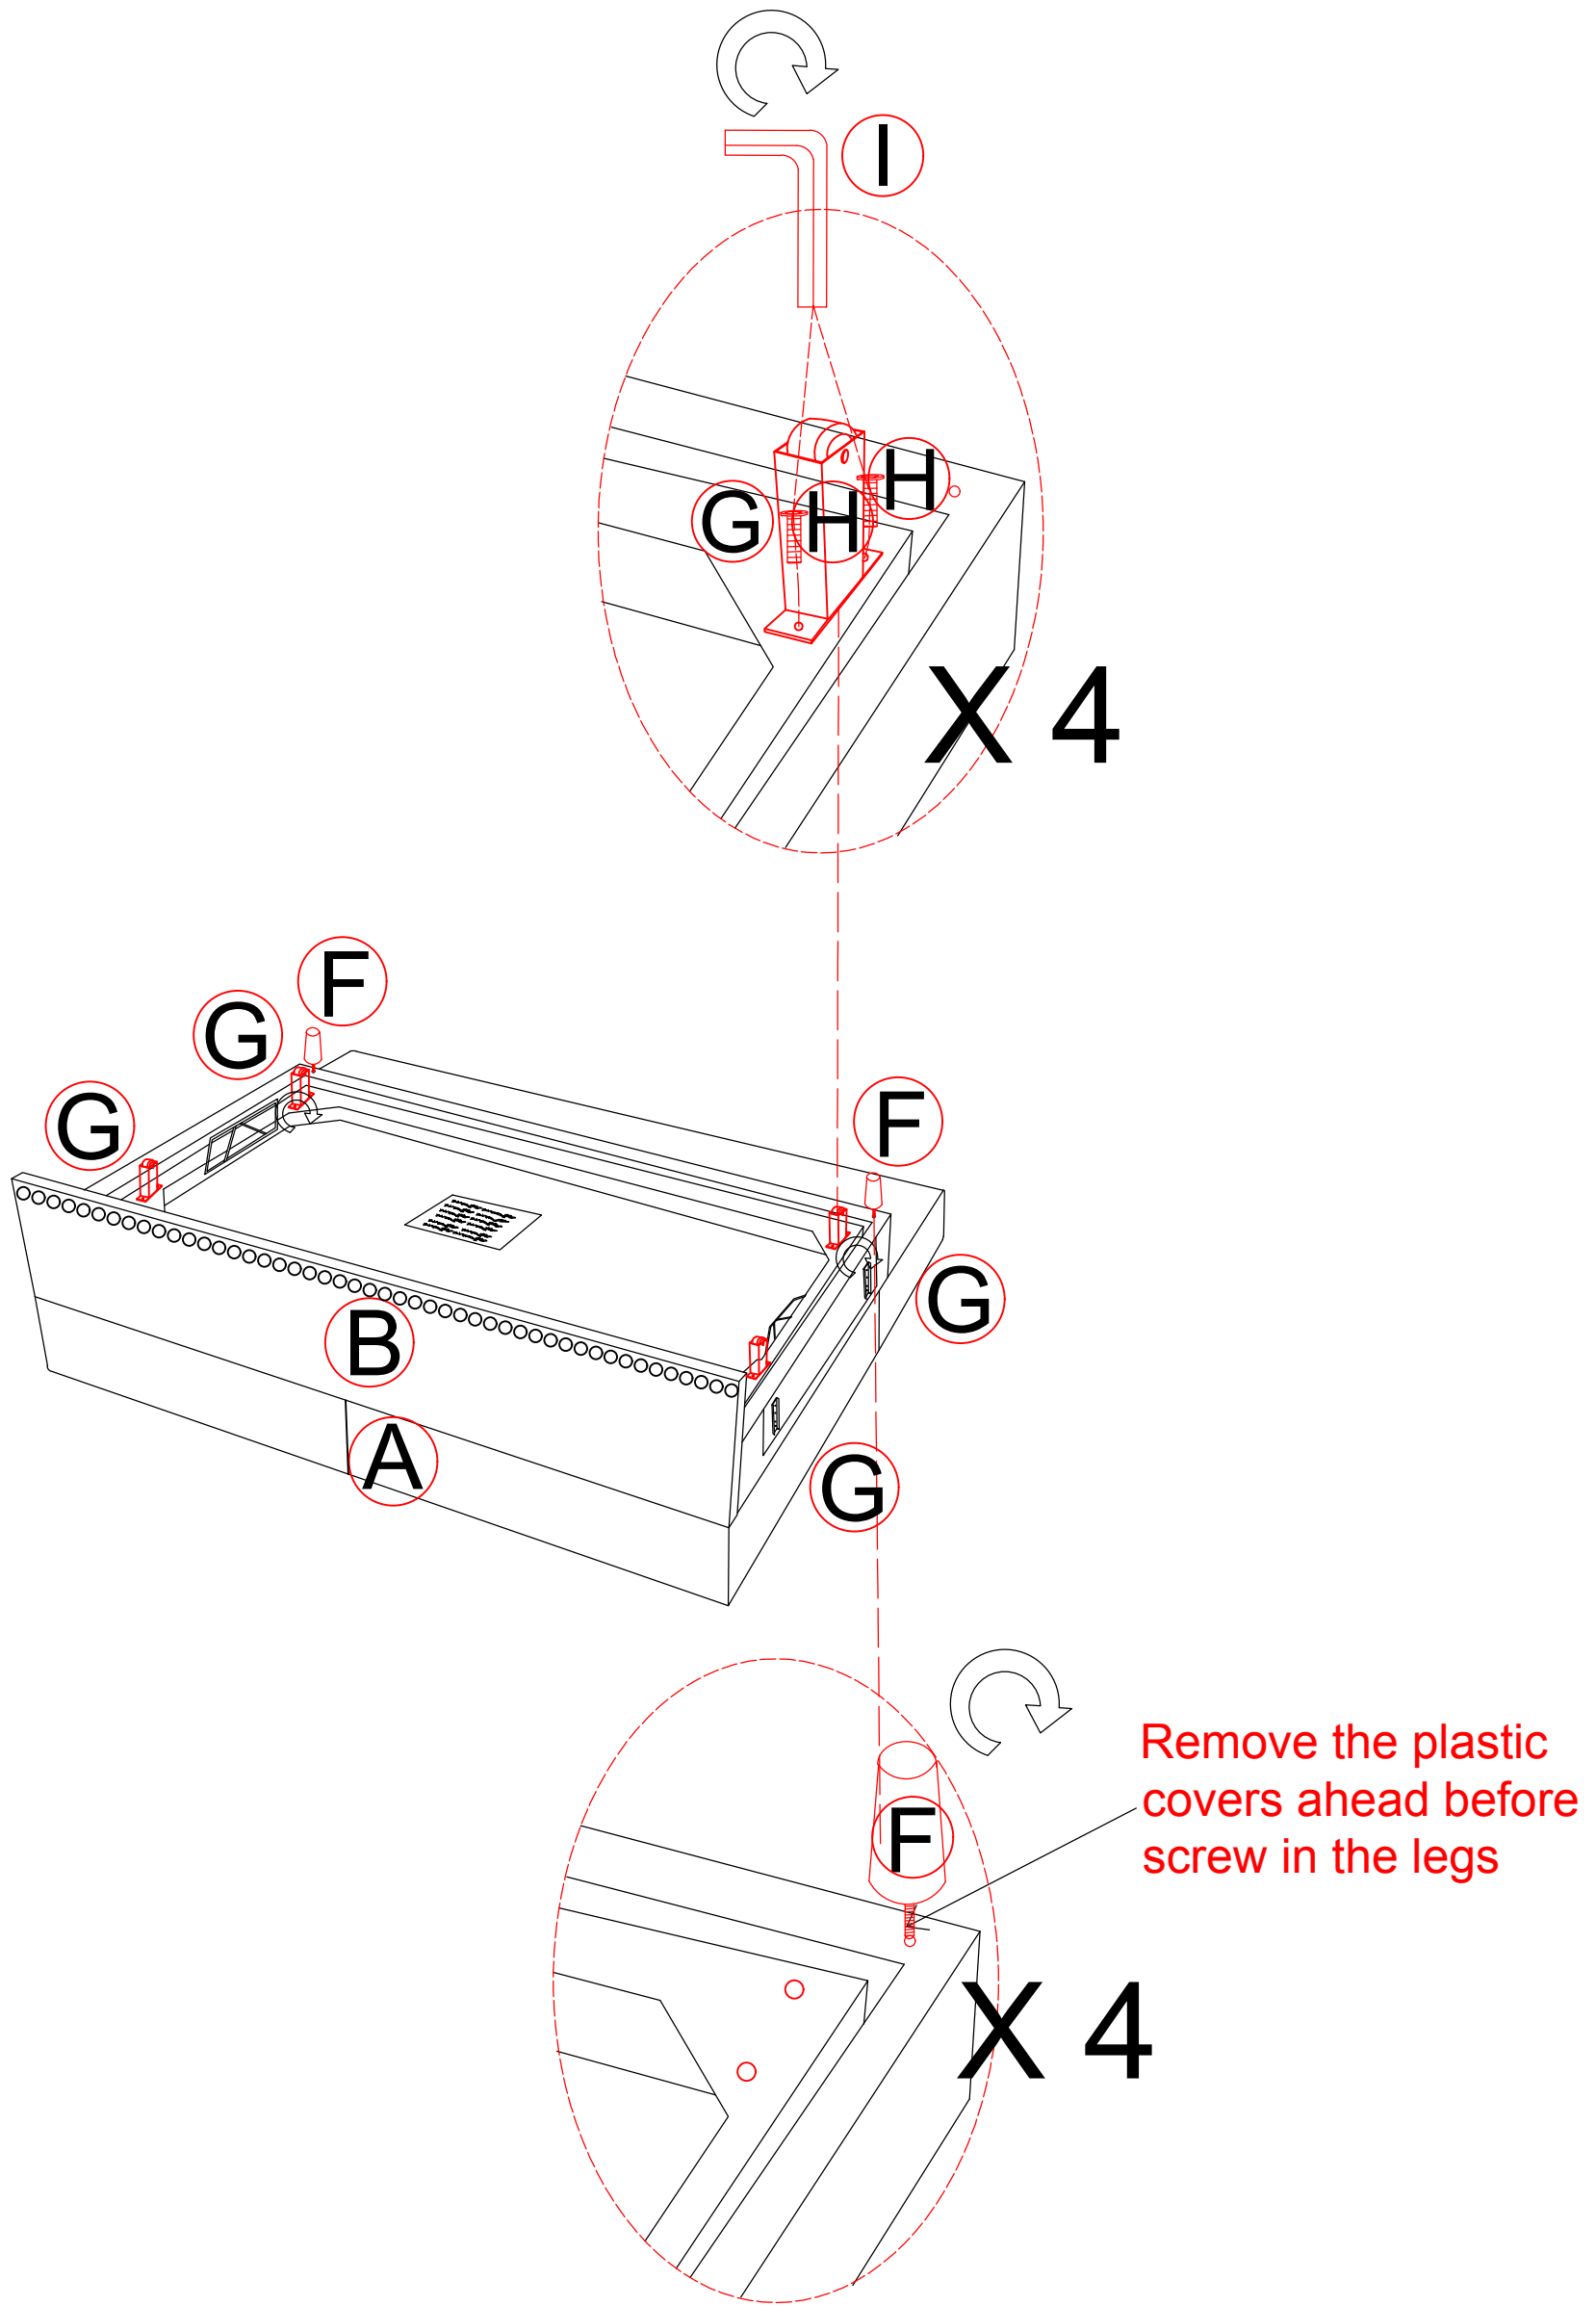
STEP 1

Ship by 1 box

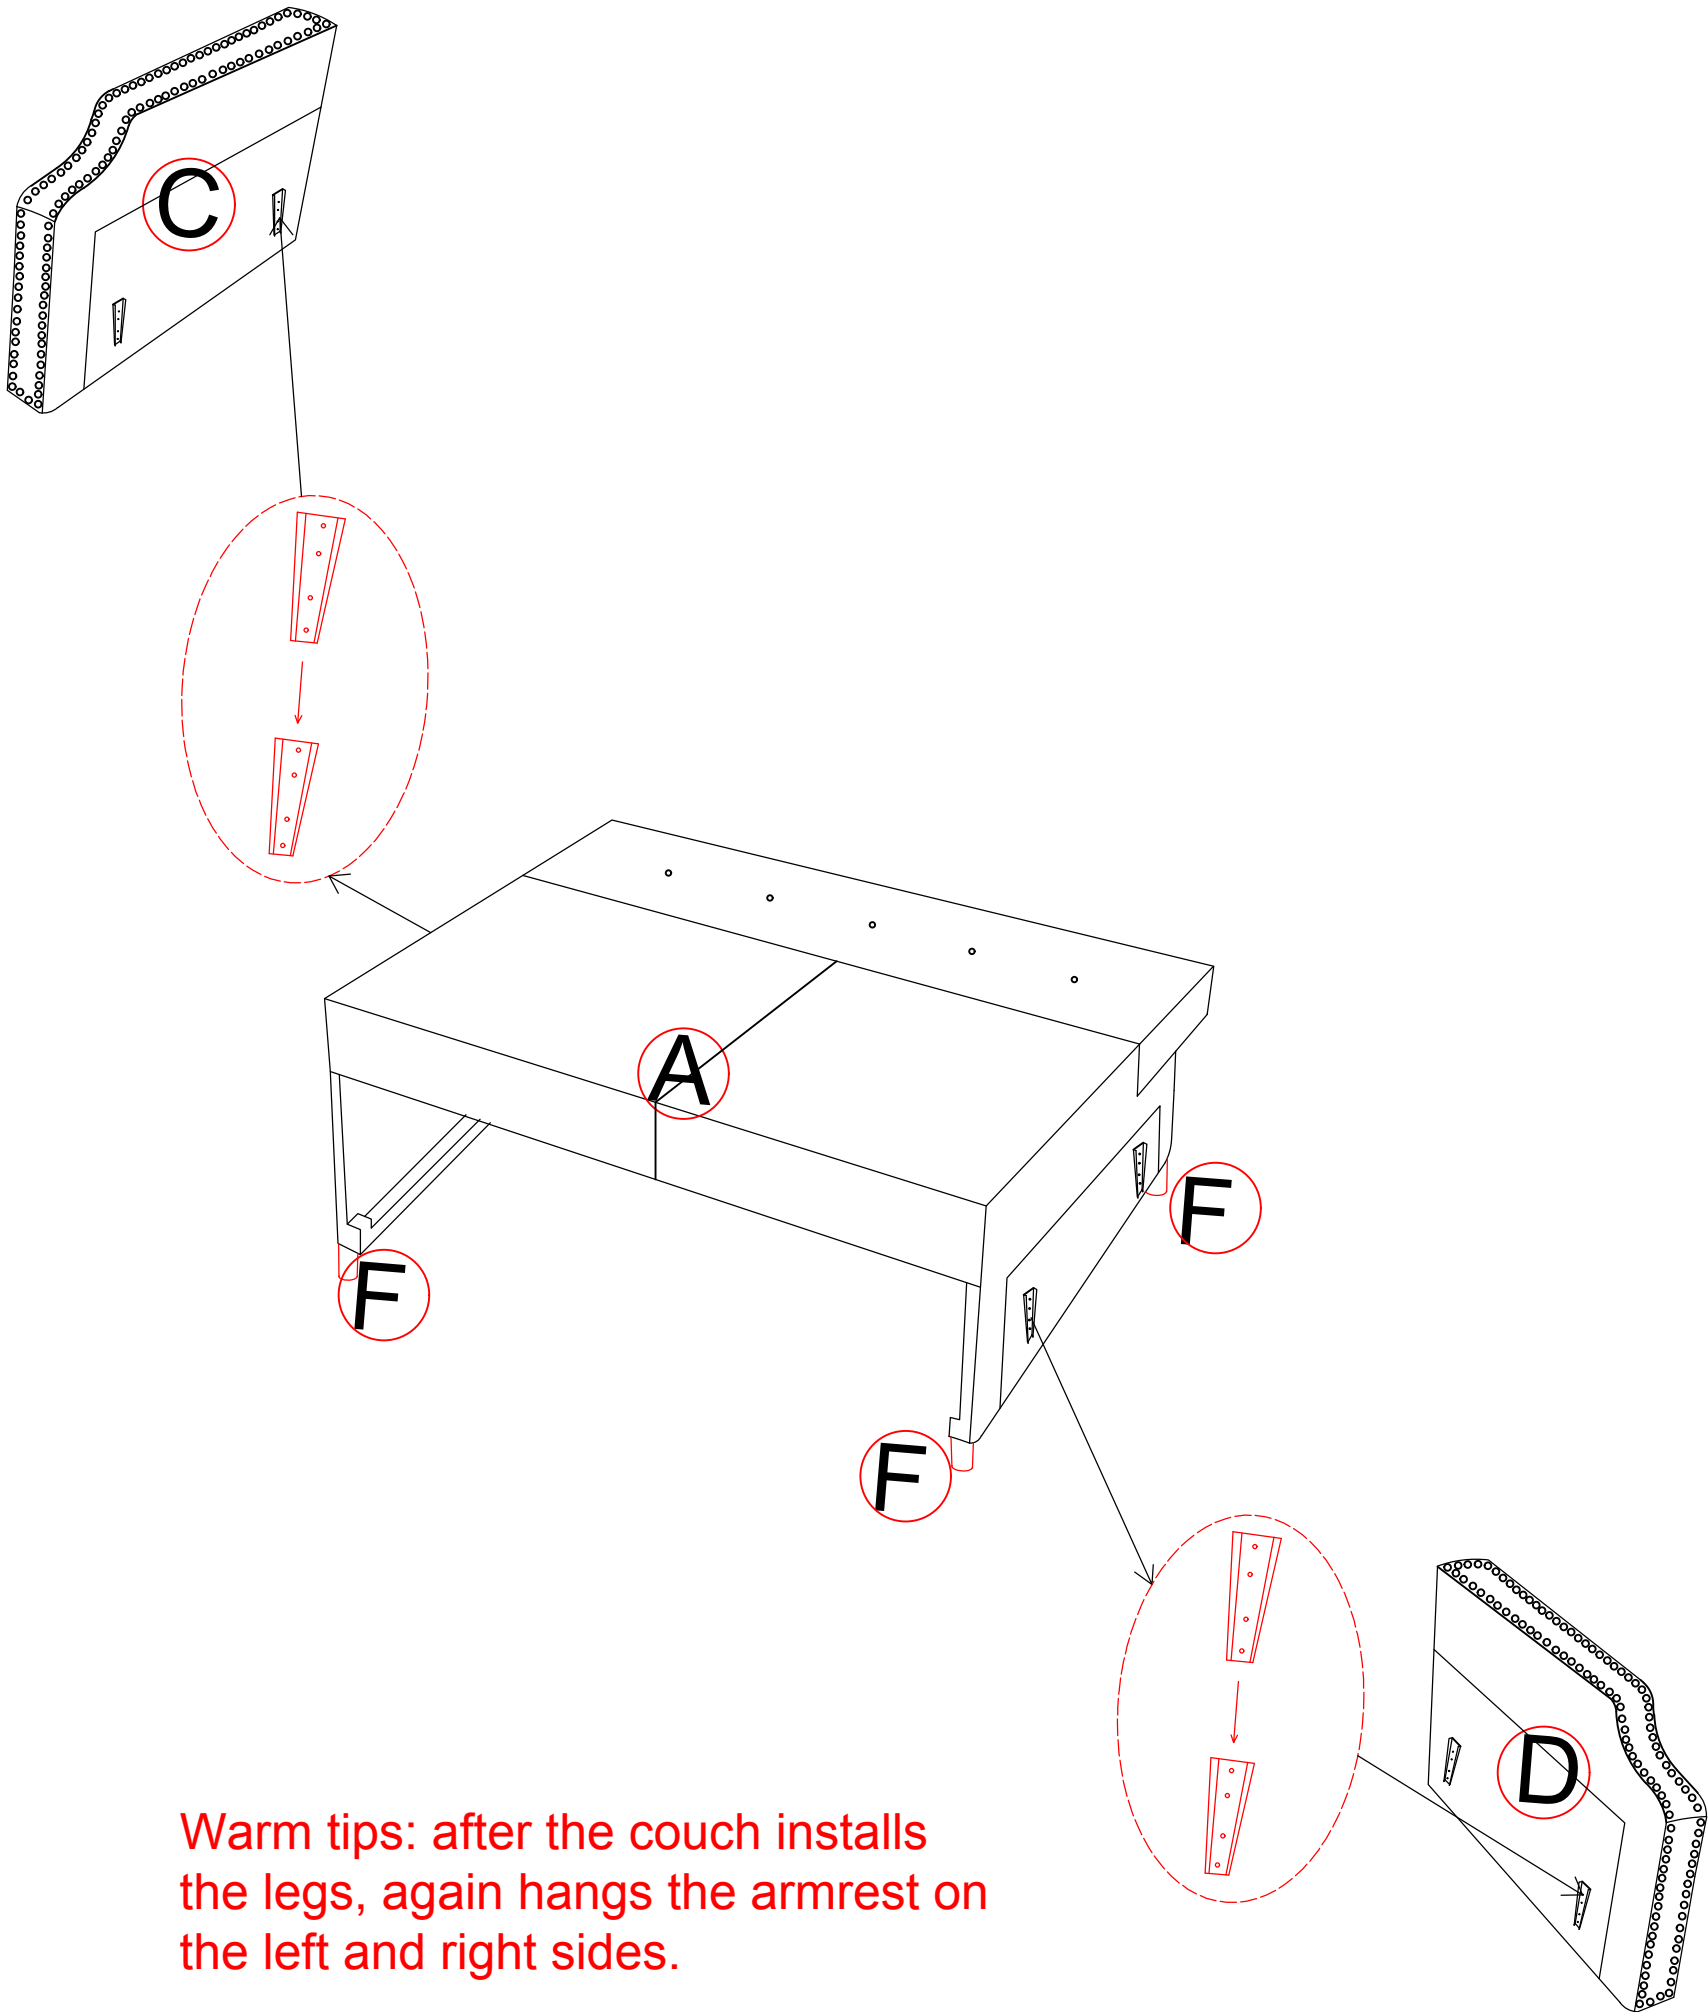


NO	PART	DECS	QTY
(A)		SEAT CUSHION	1pc
(B)		TRUNDLE BED	1pc
(C)		LEFT ARM	1pc
(D)		RIGHT ARM	1pc
(E)		PILLOW	2pc
(F)		LEGS	4pc
(G)		LEGS	4pc
(H)		SHORT SCREW	8pc
(I)		L-SHAPED WRENCH	1pc
(J)		USB POWER	1pc
(K)		PILLOW	2pc

STEP 2

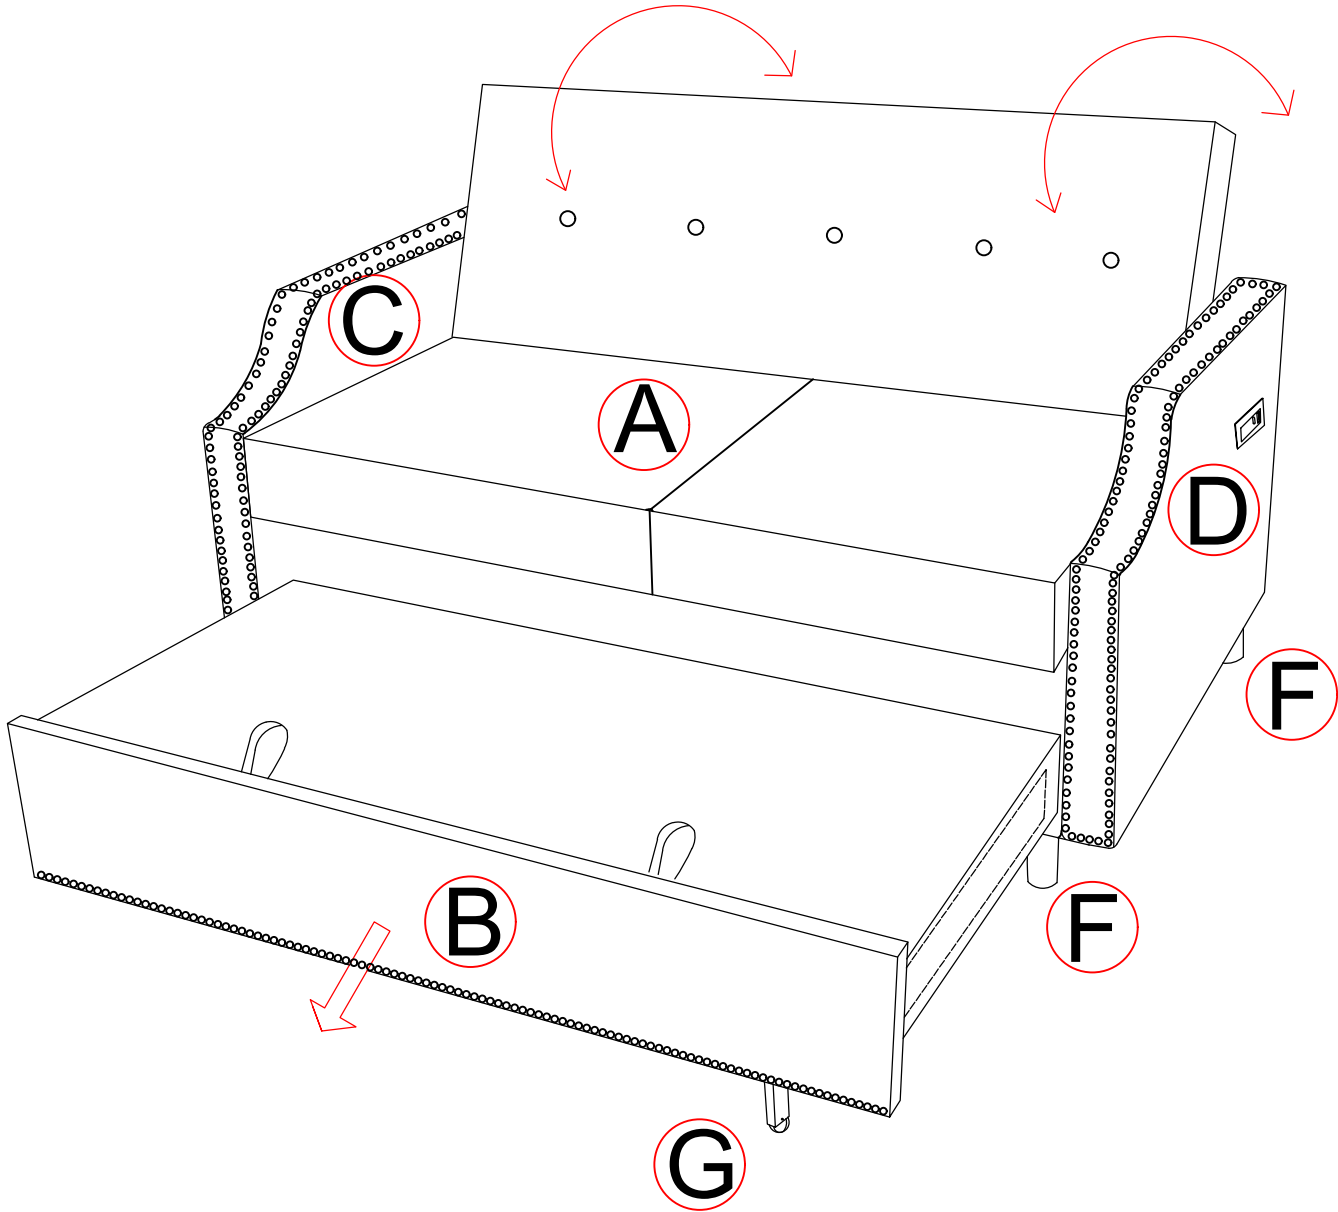


STEP 3



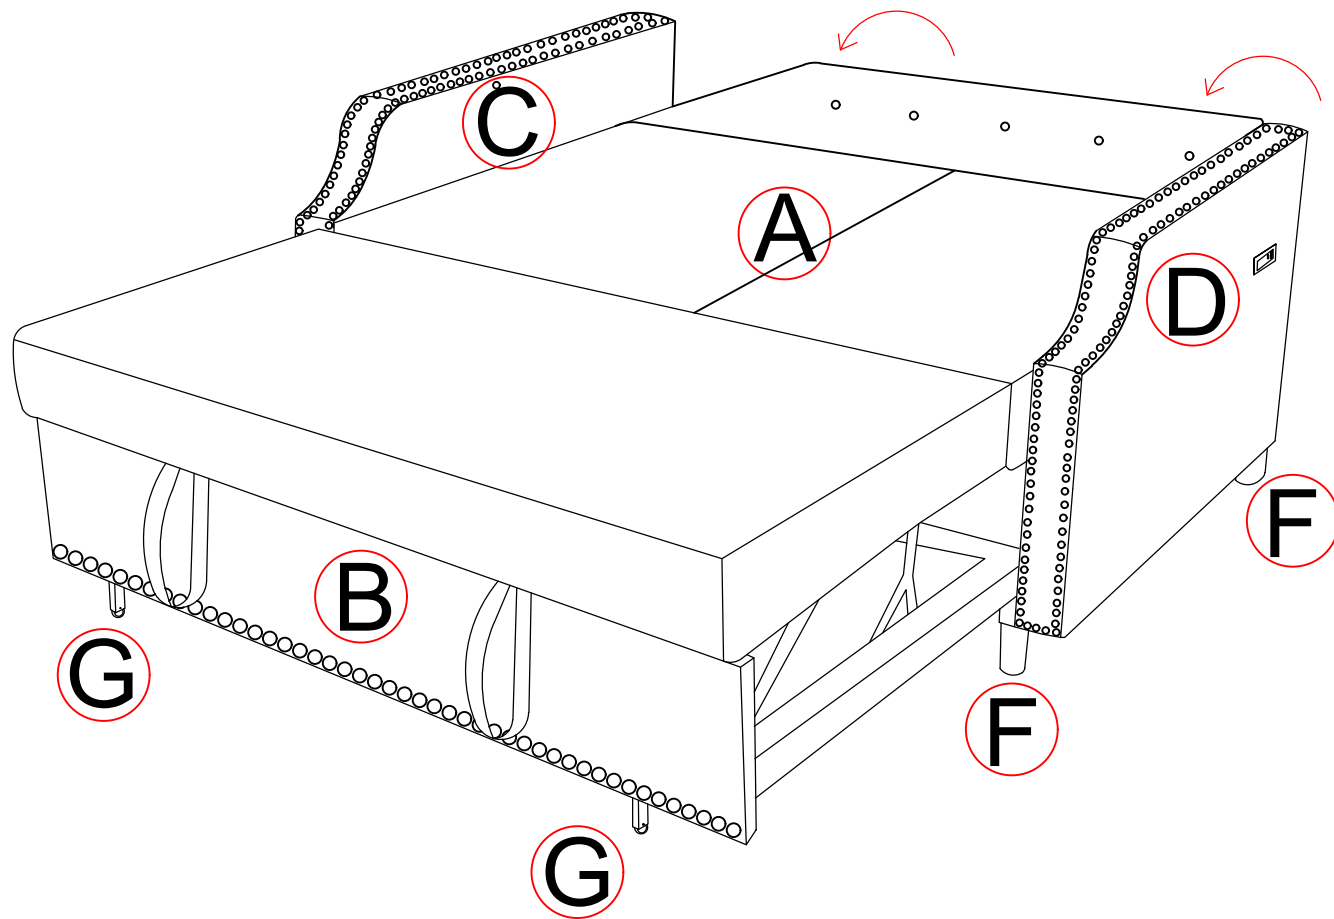
Warm tips: after the couch installs the legs, again hangs the armrest on the left and right sides.

STEP 4

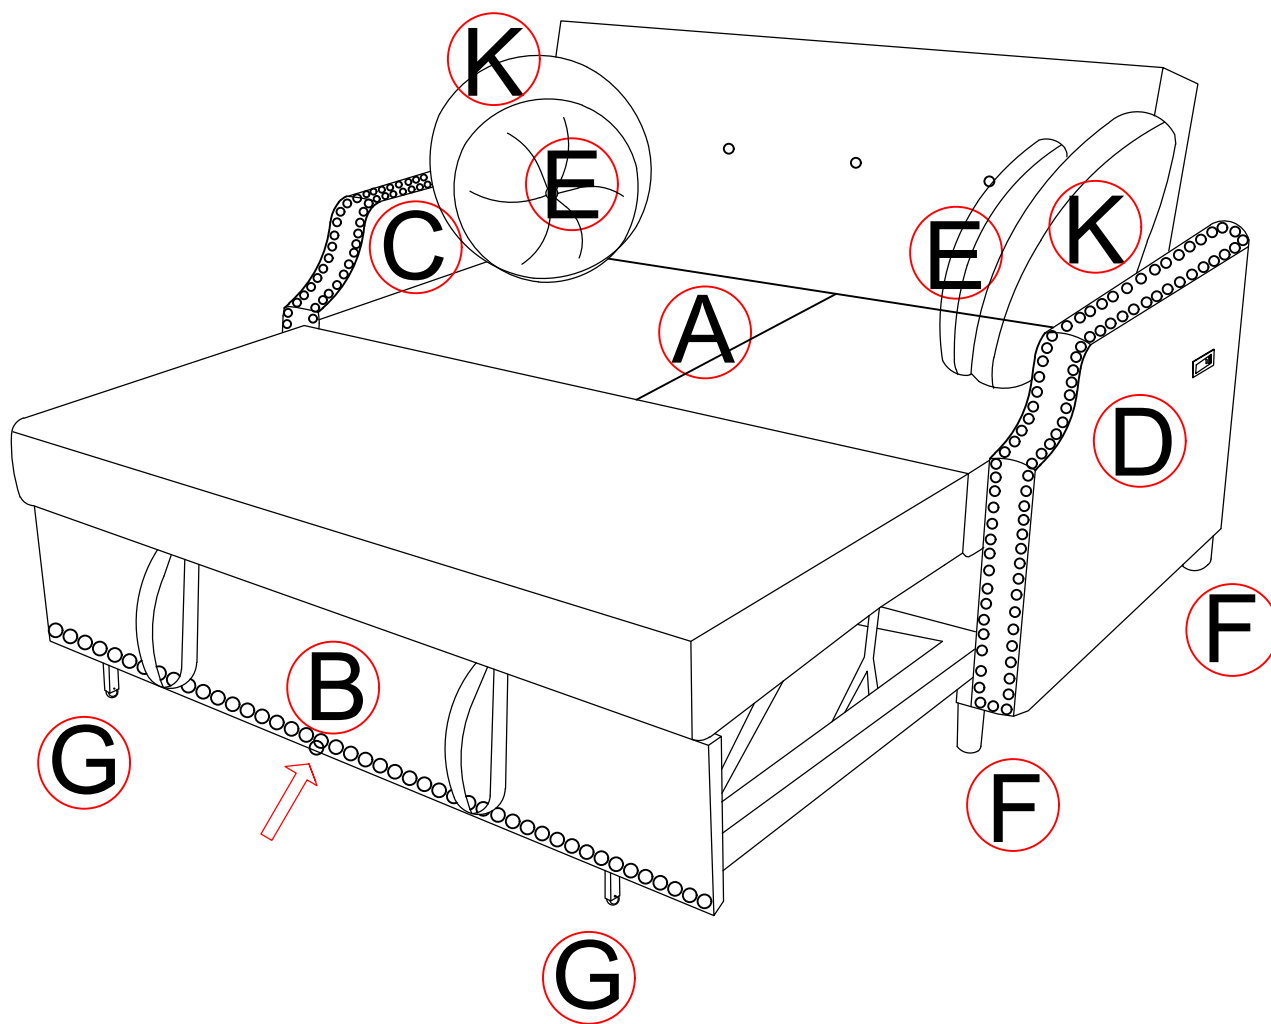


The trundle bed can be pulled out.

STEP 5



The backrest can be flat.



STEP 6

