

ASSEMBLY INSTRUCTION

WF307835 - WF307836 - WF307837

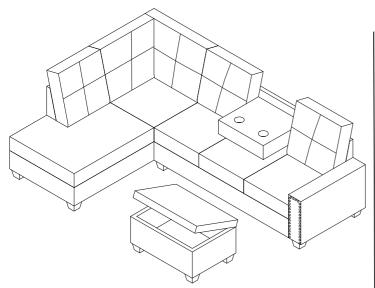


OPTION 1: CHAISE ON LEFT

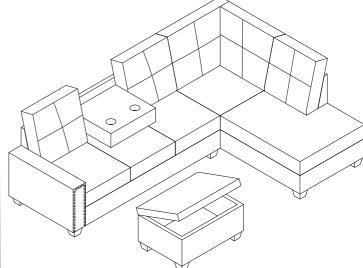

OPTION 2: CHAISE ON RIGHT


PARTS

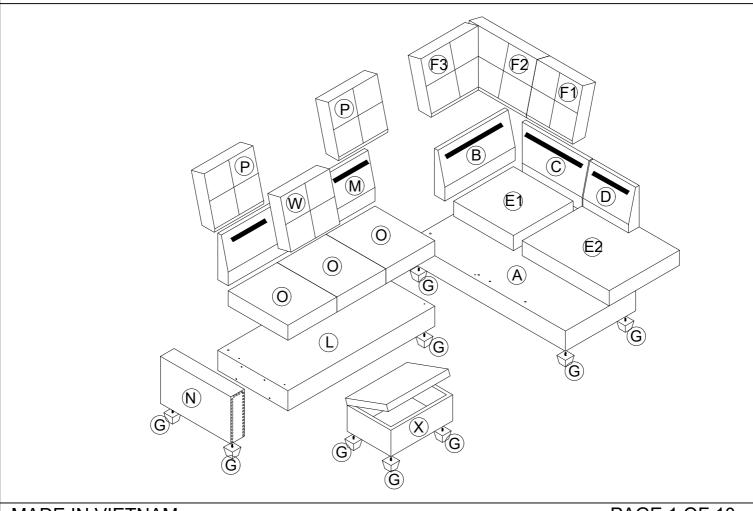

MADE IN VIETNAM


PAGE 1 OF 10

TIPS




Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package,


WF307837 - COMPONENT LIST

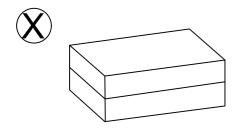


STORAGE OTTOMAN x 1

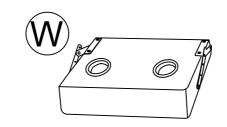


SOFA MIDDLE BACK CUSHION x 1

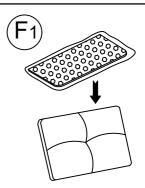

FRONT BACK CUSHION x 1

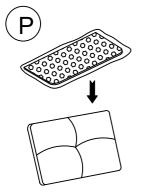


3-SEATER BACK CUSHION X 2




LEG x 4


WF307835- COMPONENT LIST




3-SEATER SEAT X 1




CHAISE BACK REST X 1

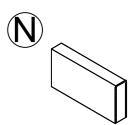


ARM x 1



SOFA SEAT CUSHION X3



MIDDLE BACK CUSHION x 1

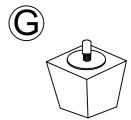


LEG x 4


PAGE 2 OF 10

MADE IN VIETNAM


WF307836- COMPONENT LIST

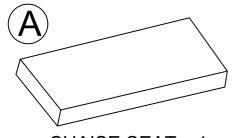

CHAISE SEAT x 1




RSF CHAISE BACK REST X 1




CHAISE BACK REST x 1







BACK REST WITH MIDDLE BACK CUSHION x 1




REAR SEAT CUSHION x 1



FRONT SEAT CUSHION x 1



REAR BACK CUSHION x 1




LEG x 4


HARDWARE (in box WF307835)




FLAT WASHER Ø5/16" x 22MM 13PCS




HEX NUT Ø5/16" x 12MM 9PCS




BOLT Ø5/16" x 90MM 9PCS




BOLT Ø1/4" x 65MM 4PCS




BOLT Ø1/4" x 20MM 4PCS

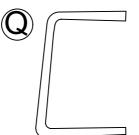

METAL CONNECTOR 2PCS



ALLEN KEY 1PC



OPEN WRENCH 1PC


MADE IN VIETNAM

PAGE 3 OF 10

Step 1:


Remove the hardware and the leg box from packet.

Place all parts on a clean, smooth surface

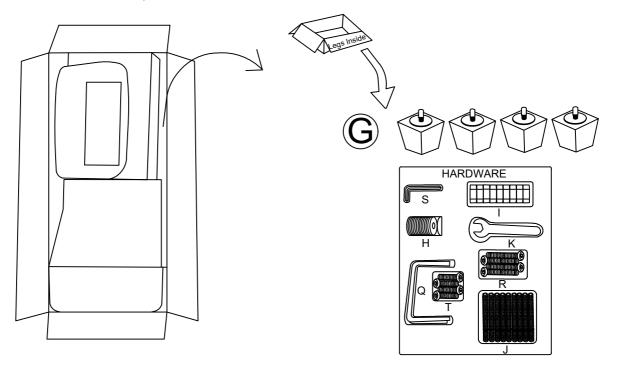

Step 2:

Manually screw J to C , B and D as shown.

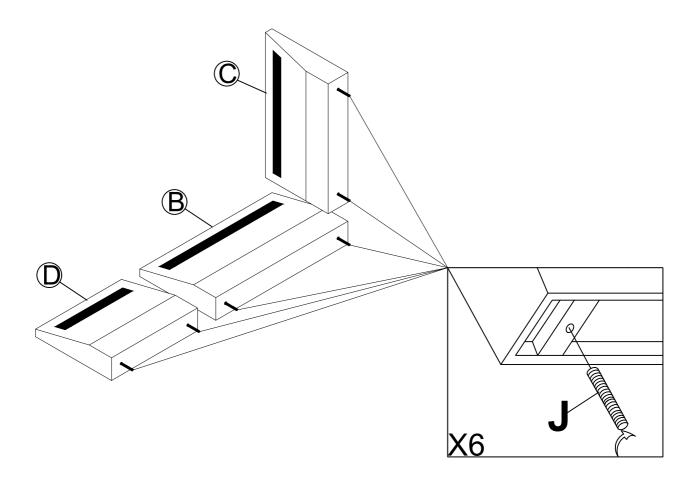


MADE IN VIETNAM


PAGE 4 OF 10

Step 3:

Align the backrest B,C and D with the hole in A. Fix it by using H&I

Option 1

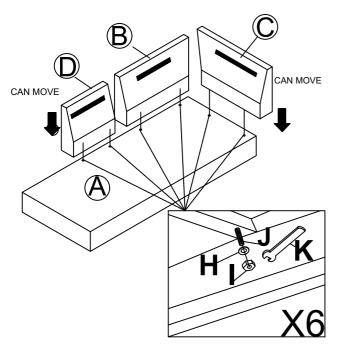


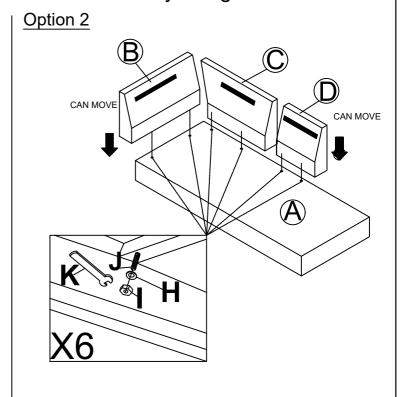

Step 4:

Manually legs G x 4 to A , as shown

▲Please remove the protective cap on the tip of thread before assembling.

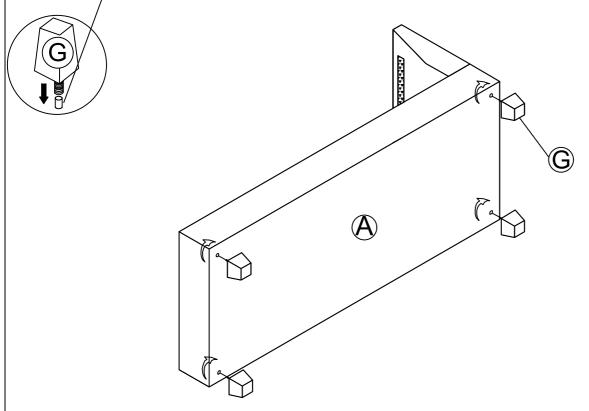


MADE IN VIETNAM

PAGE 5 OF 10

BOTTOM VIEW

Step 5:
Manually screw J to M as shown.

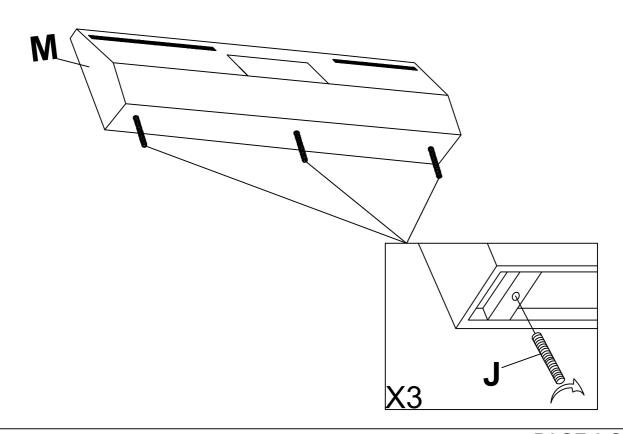


MADE IN VIETNAM

PAGE 6 OF 10


Step 6:


Align the backrest M&N with the hole in L. Fix it by using H &I.

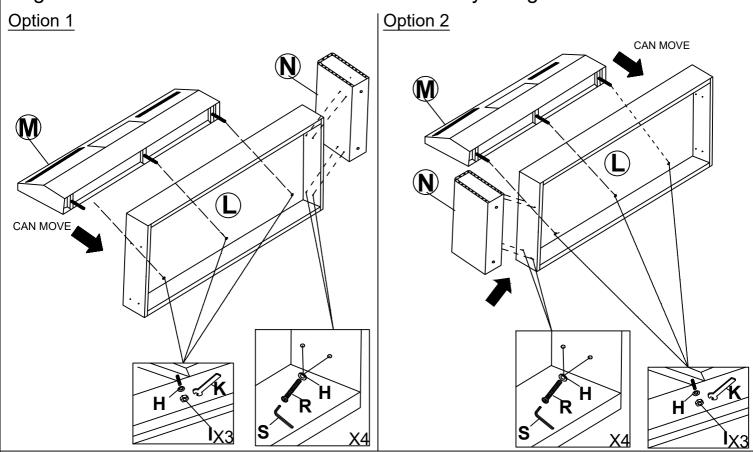

Step 7:

Manually legs G x 4 to L , as shown




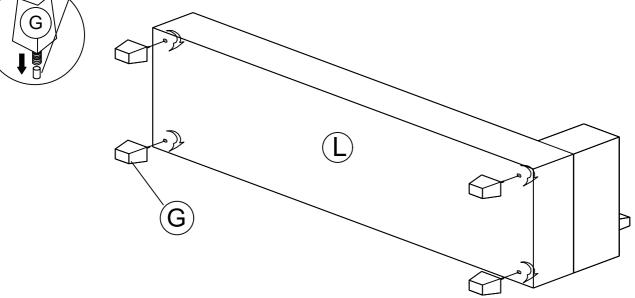


MADE IN VIETNAM

PAGE 7 OF 10

BOTTOM VIEW

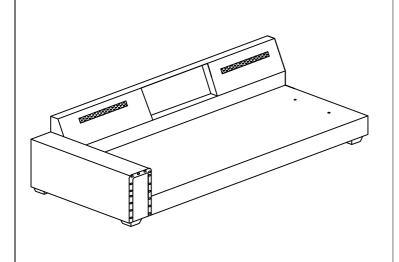


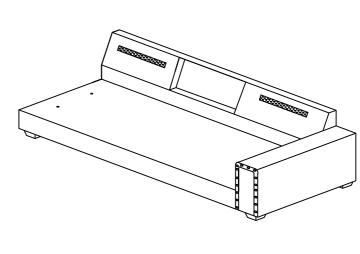


Step 8:

Option 1

Attach base of A with L.

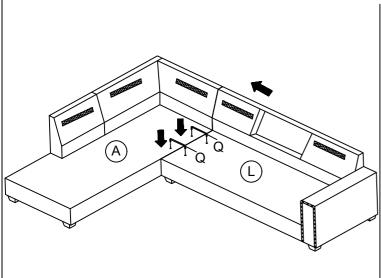



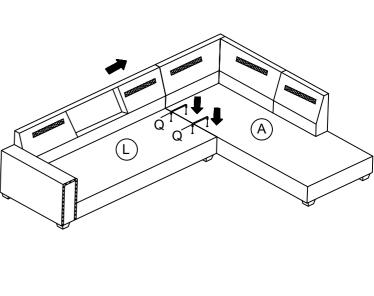


Step 9:

Attach W to the back rest M by using T x 4.

Option 1


Option 2

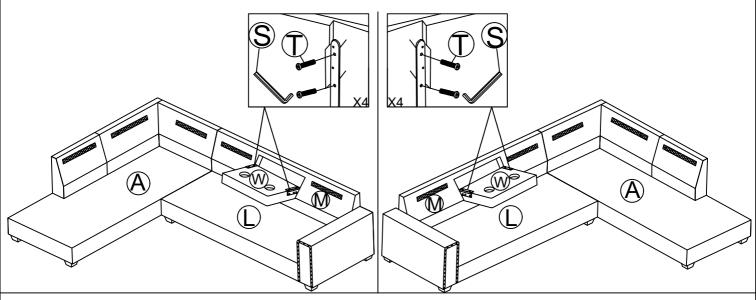

Step 10:

Remove seat cushion from their package


Place E1x1, E2x1, and Ox3 onto the sofa as show below.

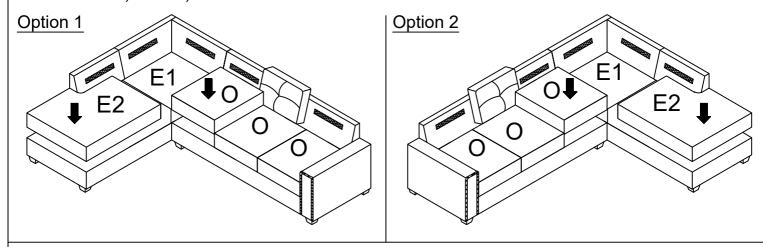

Step 11:


Remove back cushion from their package

Place F1x1, F2x1, F3x1 and Px2 onto the sofa. As show below.

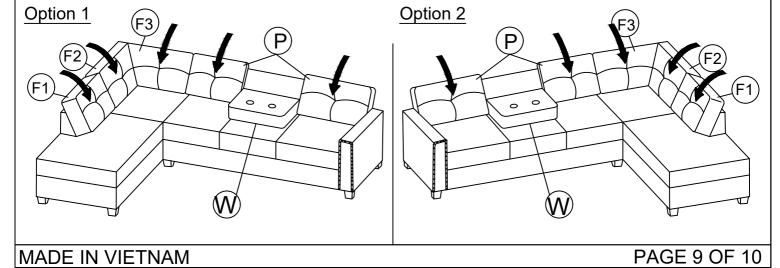


Step 12:

 $\overline{\text{Man}}$ ually legs G x 4 to X, as shown.

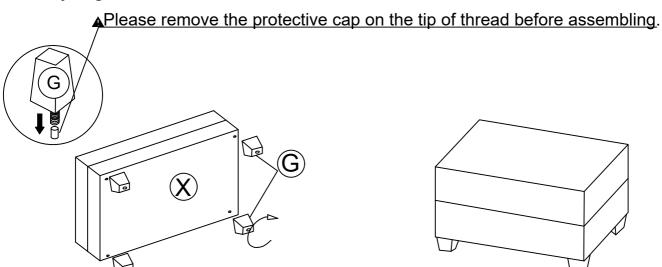


Tips: Stretch, pull down and pat seat cushoins and back cushions to return nature shape and state.

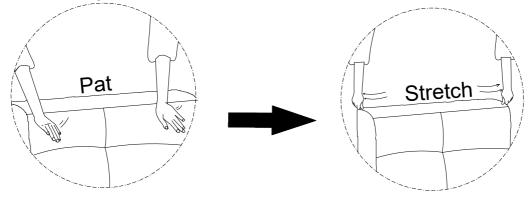

Assembly Completed!

THE CONSOLE PIECE CAN BE DROPPED DOWN AND TURN INTO AN ARMREST PANEL WITH CUP HOLDERS

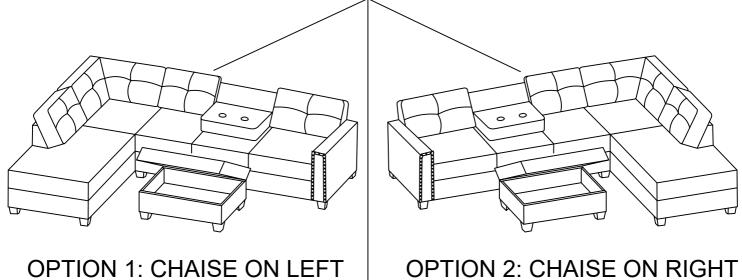

MADE IN VIETNAM

PAGE 10 OF 10